

GETRIEBEBAU NORD

Member of the NORD DRIVESYSTEMS Group



Getriebebau NORD GmbH & Co. KG

Getriebebau-Nord-Straße 1 • 22941 Bargteheide, Germany • www.nord.com

SK TIE4-M12-SH-IN


Part number: 275 274 519

Connection extension "Safe Stop" input
M12 control system plug connector

Scope of supply

| | | |
|-----|--------------------|-------------------|
| 1 x | M12 male connector | SK TIE4-M12-SH-IN |
| 1 x | Cover cap | yellow |

As-delivered status with screwed-on connector cover

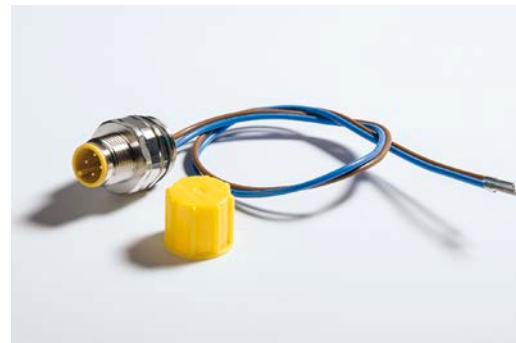

Field of use

The M12 Socket connector has open cable ends and wire end sleeves. It is used to make a pluggable connection using normal commercial M12 round plug connectors. It connects the control terminal strip with the outgoing control signal cable at the output side.

Technical data

| Version | |
|---|--|
| Temperature range | -30 ... +90 °C |
| Contact insert Color / Material | Grey / RAL 1021 Plastic |
| Round plug connector Material | Metal, CuZn, nickel plated |
| Connection / Type Round plug connector | M12x1, adjustable M12 male connector with flexible strand M16x1.5, metric screw thread |
| Contact set Contacts / Coding | 4 pin, A - coded |

| | |
|---|------------------------------|
| Weight | 23 g |
| Connector cover Color / Material | Yellow / RAL 1021 Plastic |
| Protection class (screwed) | IP67 |
| Fastening | Hexagonal nut M16x1.5 * |
| Tightening torques * M12x1 Socket connector M16x1.5 Screw thread | 0.6 Nm 1.5 Nm |


* Suitable assembly spanner commercially available (see Installation)

| Cable | |
|---|--------------------------|
| Number of conductors / Cross section | 2 x 0.34 mm ² |
| Wire strands / colors | UL / (bl, sw) |
| Length of wire strands | 250 mm |
| Degree of fouling | 3 / 2 |

| | |
|-----------------------|--------------------------|
| Mech. Service life | Min. 100 plugging cycles |
| Operating voltage | Max. 60 V |
| Current rating | 4 A |
| Insulation resistance | ≥ 10 ⁸ Ω |

| Technical Information / Datasheet | SK TIE4-M12-SH-IN | | | |
|-----------------------------------|-------------------|-------|------|----|
| Connection extension | TI 275274519 | V 1.1 | 3021 | en |

Circuit diagram

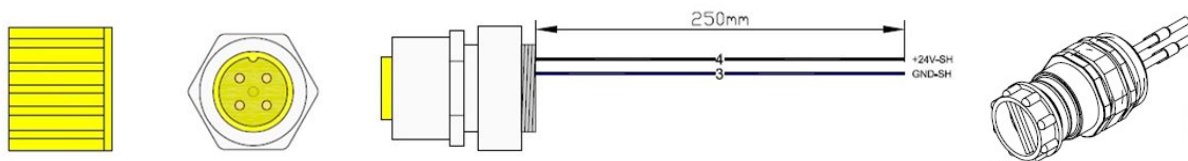


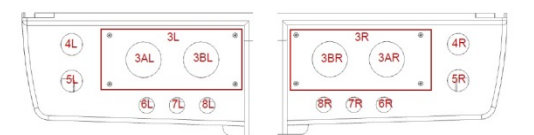

NOTICE

Validity of this document

This document is only valid in combination with the operating instructions for the relevant electronic drive technology and under strict compliance with the safety and warning instructions which they contain. Safe commissioning of this module and the electronic drive technology depends on the availability of this information.

Installation / option locations




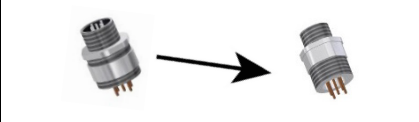

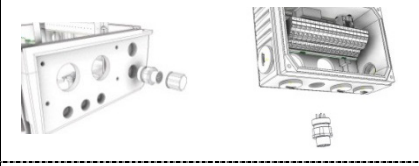

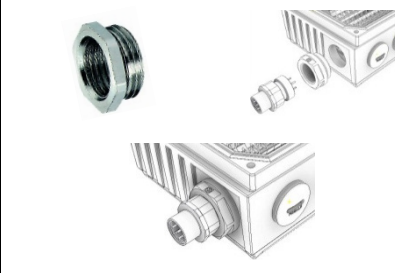
 
 
 
 
 
 
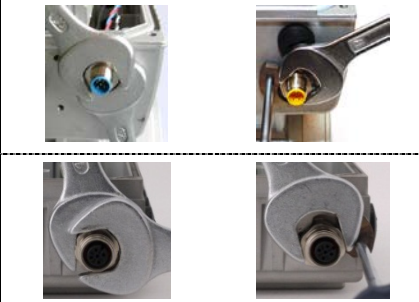
The M12 Receptacle connector are intended for direct installation in a free M16 hole / threaded opening of the device series (see below).


| Device series | Recommended option location | Option locations |
|--|--|--|
| SK 135E * SK 180E * ... SK 190E * Housing SK 1xxE xxx-xxx-x (-C) | 4R / 4L (incoming) 5R / 5L (outgoing) |  |
| SK 200E Frequency inverter connecting unit SK TI4-x-2xx-x (-C) | 4R / 4L (incoming) 5R / 5L (outgoing) optional ** 6R / 6L, 7R / 7L, 8R / 8L |  |
| BUS technology box BUS connection unit SK TI4-TU-BUS (-C) | 1 / 2 / 3 / 4 optional *** 5R / 5L |  |
| * The configuration capability of the respective Receptacle connector depends on its functionality with regard to the device series, e.g. the SK TIE-M12-SH-IN M12 male connector cannot be installed with the SK 1xxE housing. ** Size 1 – 3 with optional SK TIE4-M12-M16 connection extension, size 4 direct installation *** With optional SK TIE4-M20-M16 connection reduction | | |

The installation position and mounting location (coding pin or coding groove on contact carrier) of the Socket connector is freely positionable and should be aligned (see installation step 6) such that angled M12 round connectors can also be connected in a way that avoids collisions.

The installation steps described in the following apply to the installation of the M12 Receptable connectors in the housing and in the frequency inverter connecting unit or the BUS connecting unit of an external technology box.

Installation steps for installation of the M12 Receptable connector

| | | | | |
|--|---|--|--|---|
| <p>1.</p> | <p>Remove M16 blind plug at the provided option location side (right / left) of the starter or frequency inverter housing or the connection unit.</p> |  | | |
| | <p>Remove M16 blind plug from the provided option location hole (bottom) of the BUS connection unit.</p> |  | | |
| <p>2.</p> | <p>Screw the middle hexagonal nut towards the front using a size 17 open-ended spanner.</p>  |  | | |
| <p>3.</p> | <p>EMC Twist associated wire pairs together (e.g. bus system, power supply, etc.).</p> |  | | |
| <p>4.</p> | <p>Screw M12 flanges component directly into the affected M12 threaded opening of the housing or connecting unit of the frequency inverter. Screw M12 Receptable connector into the relevant M16 threaded opening of the BUS connecting unit.</p> |  | | |
| <p></p> | <p>Alternative option locations Connection extension SK TIE4-M12-M16 The M12 Receptable connector can alternatively be installed with an optional M12-M16 connection extension. First screw the M12 Receptable connector directly into the connection extension and then fit into the M12 threaded opening in the connection unit. For more information see Optional accessories</p> |  | | |
| <p></p> | <p>Connection reduction SK TIE4-M20-M16 The M12 Receptable connector can alternatively be installed with an optional M20-M16 connection reduction. First screw the M12 Receptable connector directly into the connection reduction and then fit into one of the side M12 threaded openings in the connection unit. For more information see Optional accessories</p> |  | | |
| <p>5.</p> | <p>Align coding pin / coding groove vertically to 12 o'clock by rotating the front hexagonal nut.</p> | <table border="1"> <tr> <td data-bbox="997 1585 1204 1742"> <p>Socket connector</p>  </td> <td data-bbox="1212 1585 1409 1742"> <p>Plug connector</p>  </td> </tr> </table> | <p>Socket connector</p>  | <p>Plug connector</p>  |
| <p>Socket connector</p>  | <p>Plug connector</p>  | | | |
| <p>6.</p> | <p>Secure the front hexagonal nut with a 17 mm open-ended spanner. Screw the rear hexagonal nut to the connection unit or the starter or frequency inverter housing using a size 17 open-ended spanner or a special torque / installation wrench. Take the specified tightening torques into consideration, see technical data.</p> |  | | |

| | | |
|----|--|---|
| 7. | Ensure that the M12 round plug connector or the cover cap is properly screwed onto the M12 Receptable connector and tightened. |  |
|----|--|---|

NOTICE

Corrosion

Pay attention to leaktightness during the installation of all components (assembly, connection extension etc.). It must be ensured that all components are correctly seated, and the tightening torques are adhered to when doing this.

Failure to do this will allow moisture to penetrate the device, which will result in the risk of corrosion and short circuiting.

- In order to ensure that protection class **IP66** is complied with (concerns all devices with type key SK ...-C), another pressure - **leaktightness** test must be performed when the assembly work has been completed.

Information

Torque / assembly wrench



In order to provide a secure, sealed and vibration-proof connection, the M12 connection extensions, which are equipped with a hexagonal threaded ring (size 17), should be tightened with special torque / assembly wrenches. For professional installation NORD recommends the use of commercially available assembly tools (M12, size 17) with an adjustable, defined tightening torque (e.g. from Murrelektronik).

Information

NOTE:

When installed, the following **yellow** connection extensions / plugs look identical.

| Designation | Part number |
|---------------------|-------------|
| SK TIE4-M12-SH-IN | 275274519 |
| SK TIE4-M12-ASI | 275274502 |
| SK TIE4-M12-ASI-AUX | 275274513 |



Heed the correct assignment to functions when installing the different types in a connection unit / housing and mounting / connecting the function-specific M12 round plug connectors!

Connections

The open cable ends of the connection extension / M12 Socket connector are connected to the terminal strip of the control terminals in the frequency inverter (see below).



**Frequency inverter
NORDAC FLEX**



**BUS connection unit
SK TI4-TU-BUS (-C)**



**BUS technology box
SK TU4-... (-M12) / (-C)**

Electrical connections




**Connection extension
M12 Male connector
SK TIE4-M12-SH-IN**

**Connection terminals
NORDAC FLEX
SK 21xE, SK 23xE**

Contact assignments
4-pole

| Pin | Colour | Signal | Contact | Designation |
|-----|--------|----------|---------|-------------|
| 3 | blue | GND SH | 88 | GND SH |
| 4 | black | +24 V SH | 89 | +24 V SH |

Male connector
A - coded

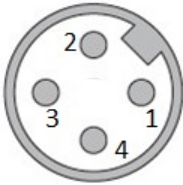

Optional accessories

i Information

M12 / M20 screw openings



Conductive connection extensions made from brass SK TIE4 M12 M16 from M12 to M16 or connection reductions SK TIE4 M20 M16 from M20 to M16 are optionally available for installing the M12 connection extensions in an M12 or M20 screw opening.

For more information, see further documentation.

Further documentation (www.nord.com)

| Dokument | Bezeichnung |
|------------------------------|--------------------------------------|
| BU 0200 | Frequency inverter manual SK 2xxE |
| BU 0230 | Functional safety for SK 200E manual |
| TI 275280000 | Bus connection unit SK TI4-TU-BUS |
| TI 275280500 | Bus connection unit SK TI4-TU-BUS-C |
| TI 275274510 | Connection extension SK TIE4-M12-M16 |
| TI 275274511 | Connection reduction SK TIE4-M20-M16 |